EN

A. Product Description

SUPERTOOTH DISCO is a Bluetooth multimedia speaker which can be connected wirelessly to a Bluetooth mobile phone, a PDA or to a Bluetooth-enabled computer. Once connected, you can stream stereo music from your phone or from your PC/Laptop to the SUPERTOOTH DISCO.

The SUPERTOOTH DISCO can also be connected to devices used to play music that require a cable or a wire. Plug in your MP3 music player to the stereo line input at the rear side of the SUPERTOOTH DISCO.

SUPERTOOTH DISCO tops all others for it is very easy and convenient to use indoor or outdoor! As you play your favorite music from your device to the SUPERTOOTH DISCO, experience best sound quality, clarity and powerful bass!

B. Product Overview

1 Speakers
2 Play / Pause Button
3 Backward / Rewind Button
4 Volume Control
5 Bass Indicator
6 Bass Button
7 Forward / Fast-Forward Button
8 Bluetooth Indicator / Low Battery Indicator
9 On / Off / Stop Button
10 Charger Port
11 Charge Indicator
12 Stereo Line Input

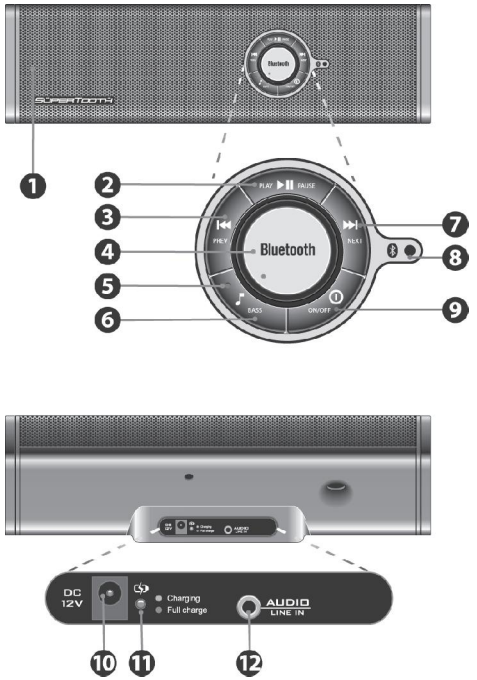

C. Low Battery

When battery is low, the **Bluetooth Indicator / Low Battery Indicator (8)** will flash red.

D. Charging

1. Connect the charger's plug into the **Charger Port (10)** of the SUPERTOOTH DISCO. Connect the charger to an external power source.
2. The **Charge Indicator (11)** will turn steady orange while charging. When charging is complete, the **Charge Indicator (11)** will turn steady green.

E. Turning On and Off

Power On: Press and hold the **On/Off/Stop Button (9)** for 1 second. The **Bluetooth Indicator (8)** will then turn blinking blue.

Power Off: Press and hold the **On/Off/Stop Button (9)** for 5 seconds until the **Bluetooth Indicator (8)** will flash red and then turns off.

F. Pairing to a Bluetooth Mobile Phone or PC/Laptop

Pair the SUPERTOOTH DISCO to your Bluetooth mobile phone or Bluetooth-enabled PC/Laptop to create the link or audio connection between the two. Pairing should be done at first connection to a phone or PC/Laptop.

Pairing to a Bluetooth Mobile Phone:

Important: Make sure that your Bluetooth mobile phone supports **A2DP*** (Advance Audio Distribution Profile) before proceeding.

1. From OFF, press and hold the **On/Off/Stop Button (9)** for 5 seconds until the **Bluetooth Indicator (8)** turns blinking red/blue indicating that the SUPERTOOTH DISCO is ready to pair.

** **A2DP** (Advanced Audio Distribution Profile) is a technology enabling to stream stereo sound from an audio source (phone, PC or laptop) to a stereo speaker or headset via Bluetooth. To do so both devices must support this profile.*

2. While the SUPERTOOTH DISCO is in pairing mode, access the Bluetooth menu of your phone. Turn on its Bluetooth function then execute a Bluetooth search to find the SUPERTOOTH DISCO. (See your phone's manual).
3. When the phone displays the list of Bluetooth devices, select **ST DISCO.**
4. When the phone asks for the password/pin code, enter **0000** and press **OK.**
5. Pairing is successful if the alternating red/blue blinking of the **Bluetooth Indicator (8)** changes to blinking blue (standby mode).

The SUPERTOOTH DISCO is now ready to use with your phone.

*Note: Some phones (like Samsung SGH U700) cannot be paired with the standard Bluetooth search. In this case at step 2, start the music player, press options, choose '**play via**', and select Bluetooth stereo headset or A/V headset, and then search for devices.*

Pairing to a Bluetooth-enabled PC/Laptop:

Important Note: Make sure that your PC or Laptop has a Bluetooth dongle that supports A2DP and has an A2DP compatible Bluetooth Application software installed before proceeding.

1. From OFF, press and hold the **On/Off/Stop Button (9)** for 5 seconds until the **Bluetooth Indicator (8)** turns blinking red/blue indicating that SUPERTOOTH DISCO is ready to pair.
2. While the SUPERTOOTH DISCO is in pairing mode, access the Bluetooth program of your PC. Refer to your Bluetooth software's manual on how to pair and connect to a device. When computer asks for the password/pin code, enter **0000.**
3. If pairing is successful, the **Bluetooth Indicator (8)** turns blinking blue (standby mode) and when connected, the **Bluetooth Indicator (8)** turns steady blue. Depending on the dongle / PC / laptop used, Bluetooth connection will be made automatically or

will need to be made manually via the computer menu (see your computer's manual).

The SUPERTOOTH DISCO is now ready to use with your PC.

G. Basic Operations

IMPORTANT: Before you can use the following functions:

- The SUPERTOOTH DISCO needs to be 'paired' with your Bluetooth mobile phone first or to your Bluetooth-enabled PC or Laptop. See **Pairing to a Bluetooth Mobile Phone or PC/Laptop** in **Section F**.
- Check if your Bluetooth Mobile Phone and your computer's Bluetooth dongle supports **A2DP** (Advanced Audio Distribution Profile).

Streaming Music from an A2DP Bluetooth Mobile Phone:

If your phone supports **A2DP**, you can stream music from your phone to the SUPERTOOTH DISCO.

1. Go to your phone's music player and play a track. If the SUPERTOOTH DISCO is connected, the music will be heard directly in the speaker. See your phone's manual if needed.
2. On some phones, audio will be on the SUPERTOOTH DISCO while other phones require you to select an output of your audio. In this case, select **ST DISCO** in the list you can reach from your phone's **"listen via"** or **"play via"** menu.
3. Audio is now on the SUPERTOOTH DISCO. At this point, the **Bluetooth Indicator (8)** will turn steady blue indicating that phone is connected with the SUPERTOOTH DISCO. When connected, you will be able to control the music using the buttons on the SUPERTOOTH DISCO.

- While music is playing on the SUPERTOOTH DISCO, you can still receive and answer calls on your phone. When a call gets through, music will be muted on the SUPERTOOTH DISCO. You can pick up the call on your phone. The music resumes when call is ended or rejected. However, on some phones, you have to press the **Play/Pause Button (2)** for 1 second or transfer audio to the SUPERTOOTH DISCO

manually using the options on your phone to resume music on the SUPERTOOTH DISCO.

Note: Depending on your mobile phone, the stopped song will resume or start from the beginning.

Streaming Music from a Bluetooth-enabled PC/Laptop:

If your computer's Bluetooth dongle and Bluetooth application software supports **A2DP**, you can stream music from your PC to the SUPERTOOTH DISCO.

► Go to your PC/Laptop's music player and play a track. If the SUPERTOOTH DISCO is connected, audio will be on the speaker. See your computer's manual if needed. Audio is now on the SUPERTOOTH DISCO and the **Bluetooth Indicator (8)** turns steady blue, which means that the computer is connected to the SUPERTOOTH DISCO. When connected, you will be able to control the music using the buttons on the SUPERTOOTH DISCO.

Note: Some computers may require setting output of audio. In this case, set output of audio manually using the options on your computer.

EN

Connecting music players directly to the SUPERTOOTH DISCO:

At the back of the SUPERTOOTH DISCO is a **Stereo Line Input (12)** used to directly connect music players.

1. Plug the audio cable into the **Stereo Line Input (12)** found at the back of the SUPERTOOTH DISCO and the other end to the output of your music player.
2. Press the Play button of your music player to play music via the SUPERTOOTH DISCO.
3. When the **Stereo Line Input (12)** is selected, you cannot control the music player using the buttons on the SUPERTOOTH DISCO. Please use your music player's buttons directly. However, you can still adjust the volume settings, bass settings and turn On/Off the SUPERTOOTH DISCO using the respective buttons.

SUPERTOOTH DISCO Button Functions
(for Bluetooth connections only):

The following functions can be controlled using the buttons on the SUPERTOOTH DISCO.

To do so, your phone must support AVRCP (Audio Video Remote Control Profile), a technology enabling to control functions directly from the SUPERTOOTH DISCO.

- To stop a track, press the **On/Off/Stop Button (9)** for 1 second.
- To pause a track, press the **Play/Pause Button (2)** for 1 second and press again to play.
- To skip to the next track, press the **Forward/Fast-Forward Button (7)** for 1 second.
- To skip to the previous track, press the **Backward/ Rewind Button (3)** for 1 second.
- To fast-forward a track at a specific point, press and hold the **Forward/Fast-Forward Button (7)** and release to resume play.

  Note: On some phones this operation is not supported.
- To rewind a track at a specific point, press and hold the **Backward/Rewind Button (3)** and release to resume play.

  Note: On some phones this operation is not supported.

Volume Setting:

Set the volume using the **Volume Control (4)**. Turn it clockwise to increase the volume. Turn it counter clockwise to decrease the volume.

Bass Setting:

Press the **Bass Button (6)** to toggle the bass boost function on or off. When the bass boost function is on, the **Bass Indicator (5)** will also turn on (steady red).
Note: Bass function is less effective at high power output.

Disconnect Phone/Computer from the SUPERTOOTH DISCO:

Press and hold the **On/Off/Stop Button (9)** for 2 seconds. The **Bluetooth Indicator (8)** will turn blinking blue.

Audio Transfer:

While music is streaming, you can transfer the audio from:

Speaker to Phone/Computer: Turn off the SUPERTOOTH DISCO or disconnect your phone / computer from the SUPERTOOTH DISCO. Audio will be transferred to your phone or computer.

Phone/Computer to Speaker:

- From OFF, press and hold the **On/Off/Stop Button (9)** for 1 second or turn on the SUPERTOOTH DISCO. Audio will be transferred on the SUPERTOOTH DISCO. Depending on your phone / computer you will have to transfer the audio via your phone / computer's menu, or clicking on the **Play / Pause button (2).**
- From being disconnected, press and hold the **Play/Pause Button (2)** for 1 second. Audio will be transferred on the SUPERTOOTH DISCO.

Note: On some phones or computer automatic audio transfer to the SUPERTOOTH DISCO is not possible. You need to transfer audio to the SUPERTOOTH DISCO manually using the options on your phone or computer.

EN

H. Advanced Functions

Multi-Pairing / Switching Connections between Phones:

The SUPERTOOTH DISCO can be paired with up to 8 Bluetooth phones or computers. An additional pairing will automatically delete the phone or computer that has not been used for the longest time. Thus, maintaining 8 phones or computers in its memory.

You can easily switch to any of the paired phones or computers by:

1. Disconnecting the currently used phone or computer using the **"Active devices"** in the Bluetooth menu or Bluetooth program of that phone or computer.
2. Connect to the wanted phone or computer by using the **"Paired devices"** in the Bluetooth menu or Bluetooth program of that wanted phone or computer.

Demo Mode

Before you can play a demo make sure that your Supertooth Disco is Off.

- Press and hold **Bass (6)** and **On/Off (9)** buttons at the same time until **Bluetooth Indicator (8)** will flash violet. Demo will be played on the SuperTooth Disco.
- Short press any on **Backward (3)**, **Forward (7)** or **Play (2)** buttons to play again the Demo.
- Press the **On/Off (9)** button until the **Bluetooth Indicator (8)** turns red to stop the demo mode.

SUPERTOOTH DISCO Specifications

Bluetooth Compliance:
Bluetooth version 2.0 specifications

Supported Bluetooth Profiles:
A2DP Advanced Audio Distribution Profile / SBC Stereo streaming / AVRCP Audio/Video Remote Control Profile

Operating Range:
10 meters (Bluetooth standard)

Frequency: 2.4 GHZ

Music Playing Time:
3 hours to 4 hours (high volume level); 10 hours (medium volume)

Stand-by time: Up to 1500 hours

Charging Time: 3 hours

Battery Type: NI MH Power pack

Audio Features:

- 2.1 channel speaker system
- Bluetooth stereo high power speaker for cell phones and computers (A2DP) or any Bluetooth stereo device
- Play / Previous / Next / Pause / Stop (AVRCP standard)
- High power speaker for non-Bluetooth computers

/ cell phones / MP3 players connected by cable to line input Jack 3.5mm stereo

- Internal Subwoofer amplifier power 12 watts RMS (real)
- Internal Left Right audio power amplifier: 2x8 watts RMS (real)
- Subwoofer speaker using Neodyne high efficiency system
- Left Right full range speaker with parabolic membrane
- All speakers magnetic shielded

Special Features:

- Bluetooth red/blue indicator
- Battery level / Charging indicator by Led

Accessories:
Wall type AC charger, 3.5 mm stereo Jack cable, carry case

Dimensions (mm): 310 x 89 x 65

Weight: 1.14 kg

A. Description du Produit

FR

Le **SUPERTOOTH DISCO** est un haut-parleur Bluetooth multimédia qui peut être connecté grâce à une liaison sans fil Bluetooth à un téléphone portable, un PDA ou un ordinateur équipé de la technologie Bluetooth. Une fois connecté, vous pouvez envoyer de la musique à partir de votre téléphone ou de votre ordinateur et l'écouter en stéréo sur votre SUPERTOOTH DISCO.

Le SUPERTOOTH DISCO peut aussi être connecté à un appareil permettant d'écouter de la musique via une liaison filaire par cordon jack 3.5 mm stéréo. Connectez votre lecteur MP3 sur l'entrée ligne stéréo située à l'arrière du SUPERTOOTH DISCO.

Le SUPERTOOTH DISCO est le plus ergonomique des haut-parleurs actuellement sur le marché. Il est aussi très pratique puisque vous pouvez l'utiliser à l'intérieur comme à l'extérieur! Vous pouvez écouter votre musique préférée via votre SUPERTOOTH DISCO et profiter d'un son clair et de très bonne qualité, ainsi que des basses puissantes!